



BET HIDRAU

CATÁLOGO

Conexões Pneumáticas

Venha conhecer nossas lojas!!!



Rua São Jorge, 211. Brasiléia. Betim/MG



313531 - 6420



3197300 - 4806



Av. Bernardino da Silva Couto, 1340. Centro. Igarapé/MG



313665 - 4434



3199569 - 0054



@bethidrau

CATÁLOGO

Conexões Pneumáticas

TUBO X TUBO

UNIÃO EMENDA



PU 04	PU 3/16"
PU 06	PU 1/4"
PU 08	PU 3/8"
PU 10	PU 1/2"
PU 12	
PU 14	
PU 16	

TEE UNIÃO EMENDA



PE 04	PE 3/16"
PE 06	PE 1/4"
PE 08	PE 3/8"
PE 10	PE 1/2"
PE 12	
PE 14	
PE 16	

COTOVELO UNIÃO EMENDA



PV 04	PV 3/16"
PV 06	PV 1/4"
PV 08	PV 3/8"
PV 10	PV 1/2"
PV 12	

Y EMENDA



 
PY 04	PY 3/16"
PY 06	PY 1/4"
PY 08	PY 3/8"
PY 10	PY 1/2"
PY 12	
PY 16	

DISTRIBUIDOR EMENDA



PK 04	PK 3/16"
PK 06	PK 1/4"
PK 08	

CRUZETA UNIÃO EMENDA

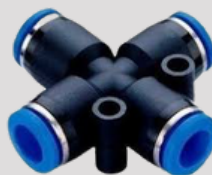

PZA 04	PZA 1/4"
PZA 06	PZA 3/8"
PZA 08	PZA 1/2"
PZA 10	
PZA 12	

UNIÃO REDUTORA



PG 06-04	PG 1/4"-3/16"
PG 08-06	PG 1/2"-3/8"
PG 10-06	
PG 10-08	
PG 12-08	
PG 12-10	
PG 16-12	

REDUTOR DE MEDIDAS



PGJ06-04	PGJ3/8"-1/4"
PGJ08-06	PGJ1/2"-1/4"
PGJ10-08	PGJ1/2"-3/8"
PGJ12-10	

*Alguns itens sujeito a consulta

CATÁLOGO

Conexões Pneumáticas

TUBO X TUBO

UNIÃO P/PAINEL



PM 04	PM 1/4"
PM 06	PM 3/8"
PM 08	PM 1/2"
PM 10	
PM 12	

COTOVELO ADAPTADOR



PLJ 06	PLJ 1/4"
PLJ 08	

TAMPÃO PLÁSTICO



PP 04	PP 3/16"
PP 06	PP 1/4"
PP 08	PP 3/8"
PP 10	PP 1/2"
PP 12	

CONTROL FLUXO



JSU 04	JSU 1/4"
JSU 06	JSU 3/8"
JSU 08	JSU 1/2"
JSU 10	
JSU 12	

VÁLVULA



HVFF 04-04
HVFF 06-06
HVFF 08-08
HVFF 10-10
HVFF 12-12

TEE UNIÃO REDUÇÃO



PUG 06-04
PUG 08-06
PUG 10-06
PUG 10-08
PUG 12-08
PUG 12-10

Y UNIÃO REDUÇÃO



PW 06-04
PW 08-06
PW 10-06
PW 10-08
PW 12-08
PW 12-10

*Alguns itens sujeito a consulta

CATÁLOGO

Conexões Pneumáticas

TUBO X ROSCA

MILÍMETRO X POLEGADA

CONECTOR MACHO (npt)



PC 04-M5	PC 08-1/8"	PC 12-1/8"
PC 04-M6	PC 08-1/4"	PC 12-1/4"
PC 04-1/8"	PC 08-3/8"	PC 12-3/8"
PC 04-1/4"	PC 08-1/2"	PC 12-1/2"
PC 06-M5	PC 10-1/8"	PC 14-1/4"
PC 06-M6	PC 10-1/4"	PC 14-3/8"
PC 06-1/8"	PC 10-3/8"	PC 14-1/2"
PC 06-1/4"	PC 10-1/2"	
PC 06-3/8"		PC 16-3/8"
PC 06-1/2"		PC 16-1/2"

CONECTOR MACHO (bsp)



PC 04-1/8"	PC 08-1/8"	PC 12-1/4"
PC 04-1/4"	PC 08-1/4"	PC 12-3/8"
	PC 08-3/8"	PC 12-1/2"
	PC 08-1/2"	
PC 06-1/8"		
PC 06-1/4"	PC 10-1/4"	
	PC 10-3/8"	
	PC 10-1/2"	

*Alguns itens sujeito a consulta

CATÁLOGO

Conexões Pneumáticas

TUBO X ROSCA


MILÍMETRO X POLEGADA

COTOVELO MACHO (npt).



PL 04-M5	PL 08-1/8"	PL 12-1/8"
PL 04-M6	PL 08-1/4"	PL 12-1/4"
PL 04-1/8"	PL 08-3/8"	PL 12-3/8"
PL 04-1/4"	PL 08-1/2"	PL 12-1/2"
PL 06-M5	PL 10-1/8"	PL 14-1/4"
PL 06-M6	PL 10-1/4"	PL 14-3/8"
PL 06-1/8"	PL 10-3/8"	PL 14-1/2"
PL 06-1/4"	PL 10-1/2"	PL 16-3/8"
PL 06-3/8"		PL 16-1/2"
PL 06-1/2"		

 COTOVELO MACHO (bsp).

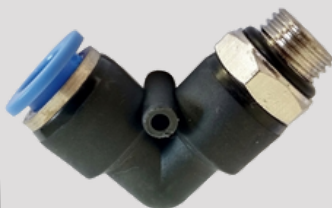

PL 04-1/8"	PL 08-1/8"	PL 12-1/8"
PL 04-1/4"	PL 08-1/4"	PL 12-1/4"
	PL 08-3/8"	PL 12-3/8"
PL 06-1/8"	PL 08-1/2"	PL 12-1/2"
PL 06-1/4"		
PL 06-3/8"	PL 10-1/8"	
PL 06-1/2"	PL 10-1/4"	
	PL 10-3/8"	
	PL 10-1/2"	

*Alguns itens sujeito a consulta

CATÁLOGO

Conexões Pneumáticas

TUBO X ROSCA

MILÍMETRO X POLEGADA

COTOVELO MACHO 45°



PLH 06-1/8"
PLH 06-1/4"
PLH 08-1/8"
PLH 08-1/4"

TEE M CENTRAL (bsp).



PB 06-1/8"
PB 06-1/4"
PB 08-1/8"
PB 08-1/4"
PB 10-1/2"
PB 12-1/4"

TEE M CENTRAL (npt).



PB 04-M5	PB 08-1/8"	PB 12-1/8"
PB 04-M6	PB 08-1/4"	PB 12-1/4"
PB 04-1/8"	PB 08-3/8"	PB 12-3/8"
PB 04-1/4"	PB 08-1/2"	PB 12-1/2"
PB 06-M5	PB 10-1/8"	
PB 06-M6	PB 10-1/4"	
PB 06-1/8"	PB 10-3/8"	
PB 06-1/4"	PB 10-1/2"	
PB 06-3/8"		
PB 06-1/2"		

*Alguns itens sujeito a consulta

CATÁLOGO

Conexões Pneumáticas

TUBO X ROSCA

MILÍMETRO X POLEGADA

TEE M LATERAL (npt).



PD 04-M5	PD 08-1/8"	PD 12-1/8"
PD 04-M6	PD 08-1/4"	PD 12-1/4"
PD 04-1/8"	PD 08-3/8"	PD 12-3/8"
PD 04-1/4"	PD 08-1/2"	PD 12-1/2"
PD 06-M5	PD 10-1/8"	
PD 06-M6	PD 10-1/4"	
PD 06-1/8"	PD 10-3/8"	
PD 06-1/4"	PD 10-1/2"	
PD 06-3/8"		
PD 06-1/2"		

TEE M LATERAL (bsp).



PD 06-1/8"
PD 06-1/4"
PD 08-1/8"
PD 08-1/4"
PD 10-1/2"

CONECTOR FÊMEA



PCF 04-1/8"	PCF 08-1/8"
PCF 04-1/4"	PCF 08-1/4"
PCF 06-1/8"	PCF 10-1/4"
PCF 06-1/4"	PCF 12-1/4"

Y TUBO MACHO (npt).



PX 04-1/8"	PX 08-1/4"
PX 04-1/4"	PX 10-1/8"
PX 06-1/8"	PX 10-1/4"
PX 06-1/4"	PX 12-1/4"
PX 08-1/8"	

Y TUBO MACHO (bsp).



PX 04-1/8"	PX 08-1/4"
PX 04-1/4"	PX 10-1/8"
PX 06-1/8"	PX 10-1/4"
PX 06-1/4"	PX 12-1/4"
PX 08-1/8"	

*Alguns itens sujeito a consulta

CATÁLOGO

Conexões Pneumáticas

TUBO X ROSCA

MILÍMETRO X POLEGADA

COTOVELO FÊMEA



PLF 06-1/8"	PLF 10-1/8"
PLF 06-1/4"	PLF 10-1/4"
PLF 08-1/8"	PLF 10-1/2"
PLF 08-1/4"	

VÁLVULA



HVSF 06-1/8"
HVSF 06-1/4"
HVSF 08-1/8"
HVSF 08-1/4"
HVSF 10-1/8"
HVSF 10-1/4"

CONTROL FLUXO



JSC 04-M5	JSC 08-1/8"	JSC 12-1/4"
JSC 04-1/8"	JSC 08-1/4"	JSC 12-3/8"
JSC 04-1/4"	JSC 08-3/8"	JSC 12-1/2"
	JSC 08-1/2"	
JSC 06-M5		
JSC 06-1/8"	JSC 10-1/4"	
JSC 06-1/4"	JSC 10-3/8"	
JSC 06-3/8"	JSC 10-1/2"	
JSC 06-1/2"		

*Alguns itens sujeito a consulta

CATÁLOGO

Conexões Pneumáticas

TUBO X ROSCA

 
POLEGADA X POLEGADA

SILENCIADOR CÔNICO



BSL M5-08
BSL 1/8"
BSL 1/4"
BSL 3/8"
BSL 1/2"

SILENCIADOR MINE

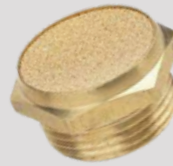

BSLM 1/8"
BSLM 1/4"
BSLM 3/8"
BSLM 1/2"

CONECTOR MACHO



PC 3/16"-1/8"	PC 3/8"-1/8"
PC 3/16"-1/4"	PC 3/8"-1/4"
PC 3/16"- 32	PC 3/8"-3/8"
	PC 3/8"-1/2"
PC 1/4"-1/8"	
PC 1/4"-1/4"	PC 1/2"-1/4"
PC 1/4"-3/8"	PC 1/2"-3/8"
PC 1/4"-1/2"	PC 1/2"- 1/2"

CONECTOR FÊMEA



PCF 1/4"-1/8"
PCF 1/4"-1/4"
PCF 3/8"-1/4"
PCF 3/8"-1/2"
PCF 1/2"-1/2"

COTOVELO MACHO



PC 3/16"-1/8"	PC 3/8"-1/8"
PC 3/16"-1/4"	PC 3/8"-1/4"
	PC 3/8"-1/4"
PC 1/4"-1/8"	PC 3/8"-1/2"
PC 1/4"-1/4"	
PC 1/4"-3/8"	PC 1/2"-1/4"
PC 1/4"-1/2"	PC1/2"-3/8"
	PC 1/2"-1/2"

TEE M LATERAL



PD 3/16"-1/8"
PD 1/4"-1/8"
PD 1/4"-1/4"
PD 3/8"-1/8"
PD 3/8"-1/4"
PD 1/2'-1/4"

*Alguns itens sujeito a consulta

CATÁLOGO

Conexões Pneumáticas

TUBO X ROSCA

POLEGADA X POLEGADA

TEE M CENTRAL



PB 3/16"-1/8"
PB 1/4"-1/8"
PB 1/4"-1/4"
PB 3/8"-1/8"
PB 3/8"-1/4"
PB 1/2"-1/4"

Y TUBO MACHO



PX 3/16"-1/8"
PX 1/4"-1/8"
PX 1/4"-1/4"
PX 3/8"-1/8"
PX 3/8"-1/4"
PX 1/2"-1/4"

COTOVELO FÊMEA



PLF 1/4"-1/8"
PLF 1/4"-1/4"
PLF 3/8"-1/8"
PLF 3/8"-1/4"
PLF 1/2"-1/4"

CONTROL FLUXO



JSC 3/16"-1/8"
JSC 1/4"-1/8"
JSC 1/4"-1/4"
JSC 3/8"-1/8"
JSC 3/8"-1/4"
JSC 1/2"-1/4"

*Alguns itens sujeito a consulta

CATÁLOGO

Conexões Pneumáticas

METÁLICAS

CONECTOR MACHO



MPC 04-1/8"	MPC 08-1/8"	MPC 12-1/4"
MPC 04-1/4"	MPC 08-1/4"	MPC 12-3/8"
	MPC 08-3/8"	MPC 12-1/2"
MPC 06-M5	MPC 08-1/2"	
MPC 06-1/8"		
MPC 06-1/4"	MPC 10-1/8"	
MPC 06-3/8"	MPC 10-1/4"	
MPC 06-1/2"	MPC 10-3/8"	
	MPC 10-1/2"	

COTOVELO MACHO



MPL 04-1/8"	MPL 08-1/8"	MPL 12-1/4"
MPL 04-1/4"	MPL 08-1/4"	MPL 12-3/8"
	MPL 08-3/8"	MPL 12-1/2"
MPL 06-M5	MPL 08-1/2"	
MPL 06-1/8"		
MPL 06-1/4"	MPL 10-1/8"	
MPL 06-3/8"	MPL 10-1/4"	
MPL 06-1/2"	MPL 10-3/8"	
	MPL 10-1/2"	

*Alguns itens sujeito a consulta

CATÁLOGO

Conexões Pneumáticas

METÁLICAS

TEE MACHO CENTRAL



MPB 06-1/8"
MPB 06-1/4"
MPB 08-1/8"
MPB 08-1/4"

UNIÃO EMENDA



MPU 06
MPU 08
MPU 10
MPU 12
MPU 1/2"

TEE EMENDA



MPE 06
MPE 08
MPE 10
MPE 12

Y EMENDA



MPY 06
MPY 08
MPY 10
MPY 12
MPY 1/2"

*Alguns itens sujeito a consulta